



Assemble Introduction


(The size will be according to regular measurements)

		<p>Remark: without footrest version no this step</p>
<p>Insert 5 castors into the base, then insert the gas lift into the center of the base.</p>	<p>Connect the armrests to armrest brackets with 4 pcs (M6*30) screws, 4 pcs M6 spring spacers and 4 pcs 6mm spacers, 2 pcs armrest tube spacers.</p>	<p>Connect the footrest and Seat cushion* Chassis assembly with 3 pcs M6*16 footrest screws.</p>
<p>Insert backrest into the chassis tailpiece of seat cushion*chassis assembly.</p>	<p>Connect the backrest to chassis tailgate with 3 pcs (M8*20) screws and 3 pcs 8mm spacers.</p>	<p>Connect the armrest to back linkage with 4 pcs (M8*78) screws and 4 pcs 8mm spacers.</p>
<p>Put the seat cushion*chassis assembly to the gas lift.</p>	<p>Insert the headrest into the backrest and fix it with 2 pcs (M6*16) screws.</p>	<p>Put the backrest trim cover on and the chair is completed.</p>



Functions

(The size will be according to regular practice)

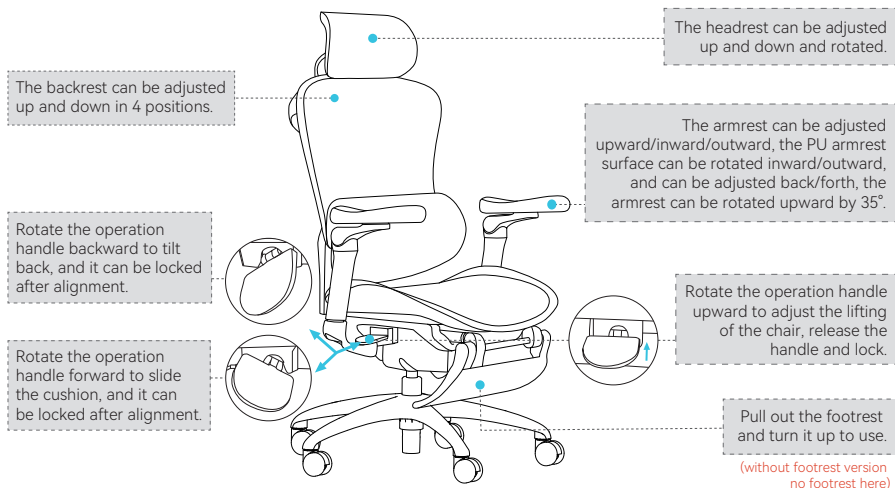

Installation Instruction

- Before installation, please read all the safety instructions below (drawings) carefully and master the installation steps and methods.
- Counting the parts is complete or not, if there is any breakage.
- To avoid injury, it is recommended that you wear gloves during installation.
- Please choose a spacious and clean flat floor for installation, and then lay the paper sleeves on the ground, to avoid collision between components and the ground.
- To avoid using the wrong screws, please fix all the screws before tightening them.
- Please note that once the gas lift is installed, it is difficult to remove.
If you need to disassemble the chair, such as moving, please gently tap the head of the gas lift with a rubber-tipped hammer several times, and then remove the base. After that, continue to gently tap the base, using the principle of vibration to make the gas lift fall off. Please be careful not to get hurt as tools are needed to do this.
(Damage and accidents caused by this operation do not fall within the scope of product warranty, please careful operation.)

Precautions For Use



- Please note that this product is designed for one person, one chair is for one person only.
- For the use of product features, please follow the instructions in the product features display.
- Make sure all screws and components are locked tightly before using this product and check it at least once every 3 months.
- Please use on the flat floor, avoid wet or fireworks places, avoid long time direct sunlight.
- Don't use sharp or hooked objects to scrape the chair and do not get it close to the fire.
- Not allowing the child under 5 years old to sit on the chair alone.
- Please don't sit on the armrest, stand on the chair or use it as a ladder or footsteps, in case cause some danger.
- To avoid any harm to your fingers don't insert them into the mechanism while sitting.
- For your safety, no disassembly to the gas lift is allowed.



Parts List

(The size will be according to regular measurements; One more as a backup)

<p>Castors: 5 pcs</p>	<p>Chair Base: 1 pc</p>	<p>Gas lift: 1 pc</p>	<p>Armrest Bracket: 1 pair</p>	<p>Headrest: 1 pc</p>
<p>Seat cushion* Chassis assembly: 1 pc</p>	<p>Backrest: 1 pc</p>	<p>Armrest: 1 pair</p>	<p>Armrest bracket screws (M8*78) 4+1 pcs</p>	<p>Armrest screws (M6*30) 4+1 pcs</p>
<p>Seat back fixing screws (M8*20) 3+1 pcs</p>	<p>Footrest: 1 pc</p>	<p>8mm Spacer: 7+1 pcs</p>	<p>6mm Spacer: 4+1 pcs</p>	<p>Hexagonal spanner: 1 pc</p>
<p>Headrest and footrest screws (M6*16) 5+1 pcs</p>	<p>Armrest tube spacers: 2 pcs</p>	<p>Backrest trim cover: 1 pc</p>	<p>M6 spring spacer: 4+1 pcs</p>	<p>0 1 2 3 4 5 6 7 8 9 10 cm</p>

Note: Before installation, pls classify the screw, measure the screw length to easy assemble.