

















71709/LC-19148 ASSEMBLY INSTRUCTION

	 ① X1	 ② X1	 ③ X1	 ④ X1	 ⑤ X1	 ⑥ X1	 ⑦ X2
 15minutes	 M6X42 ⑧ X4	 M6 ⑨ X4	 ∅6X16 ⑩ X20	 4# ⑪ X1	 10# ⑫ X1	 M6X16 ⑬ X4	 ∅6X20 ⑭ X4

