



ERVILLERS

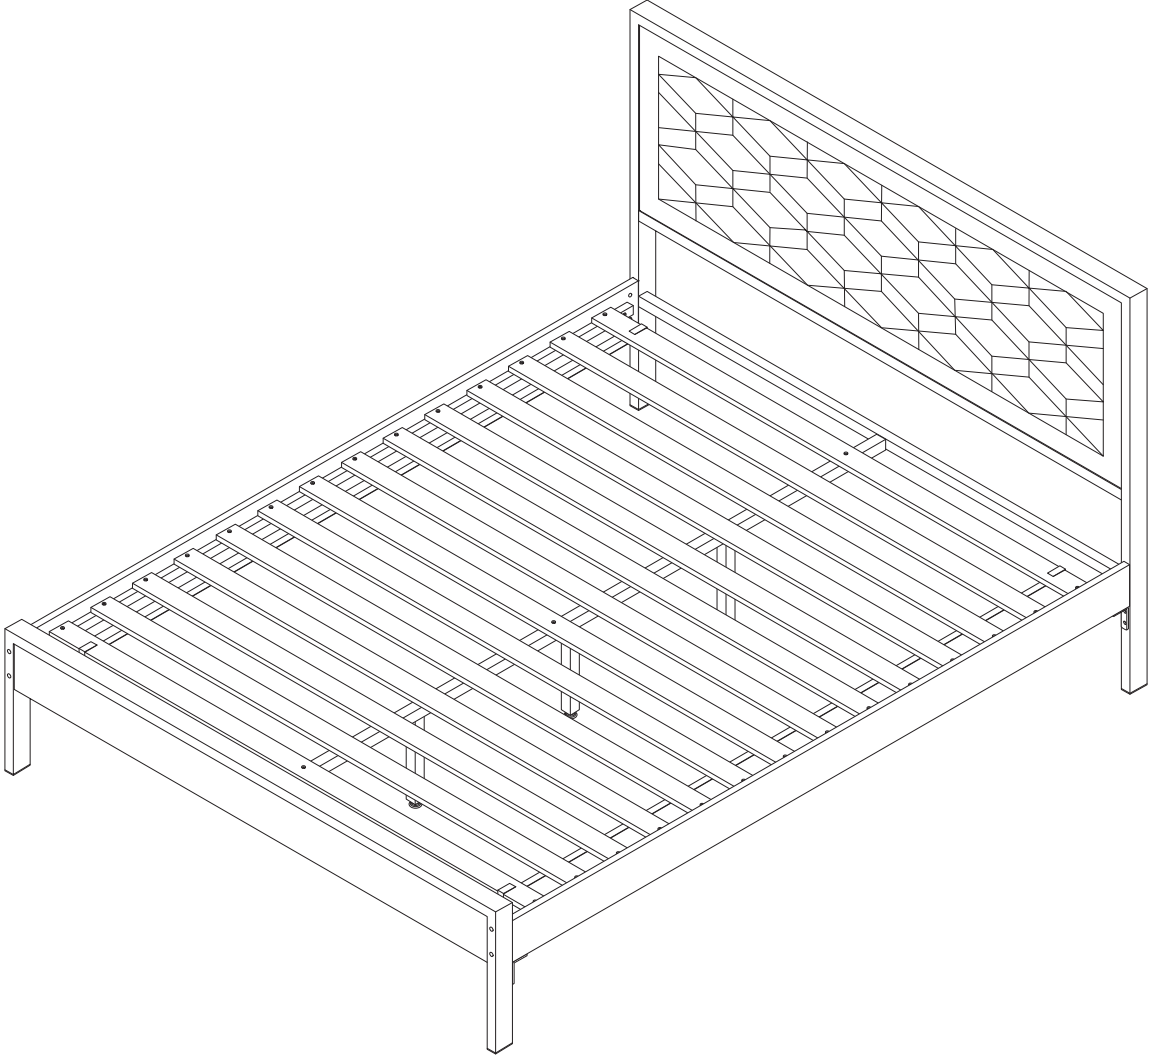

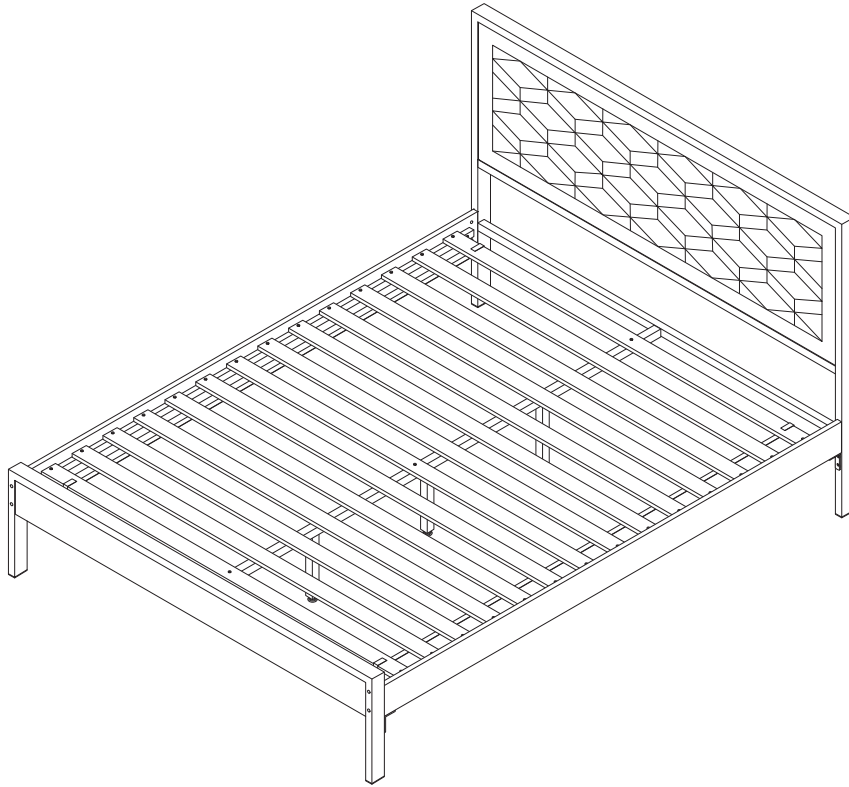




Assembly instructions for the bed frame, including tool requirements, time, and personnel.


Tools: A circle containing a screwdriver and an Allen key. A power drill is shown with a diagonal line through it, indicating it is not required.


Warning: A triangle with an exclamation mark.


Time: A clock icon with the text "45'".


Personnel: A stick figure icon with the text "2".

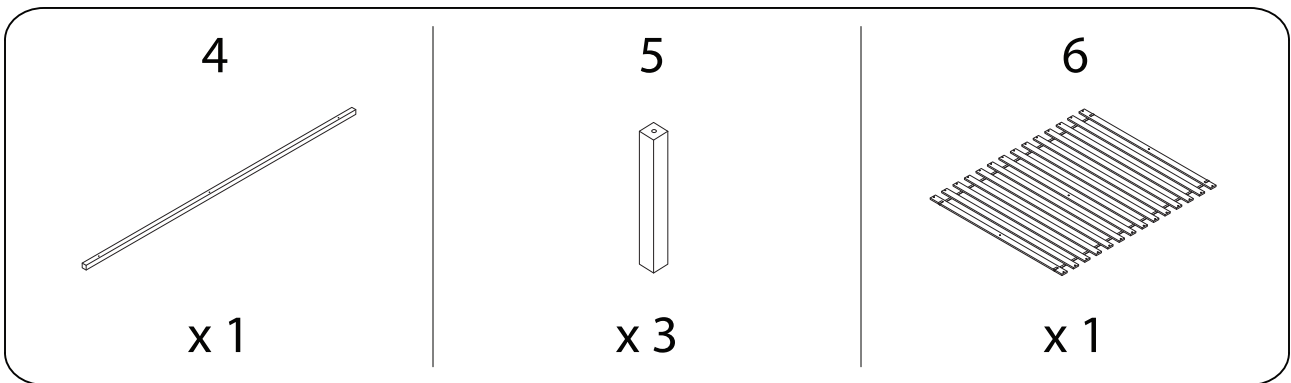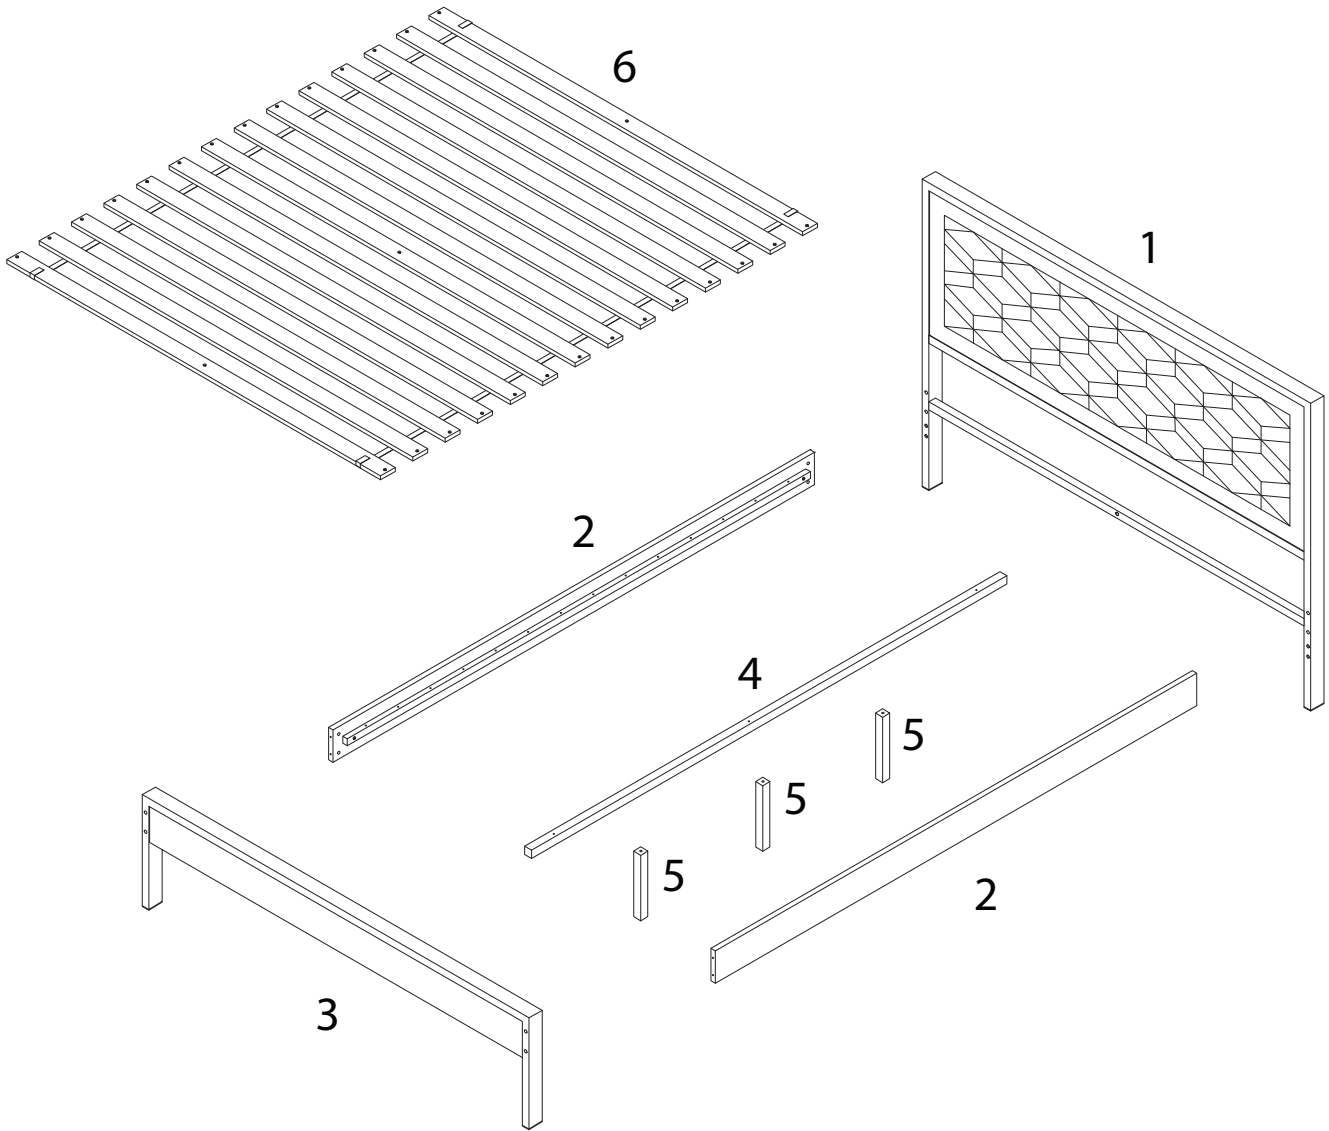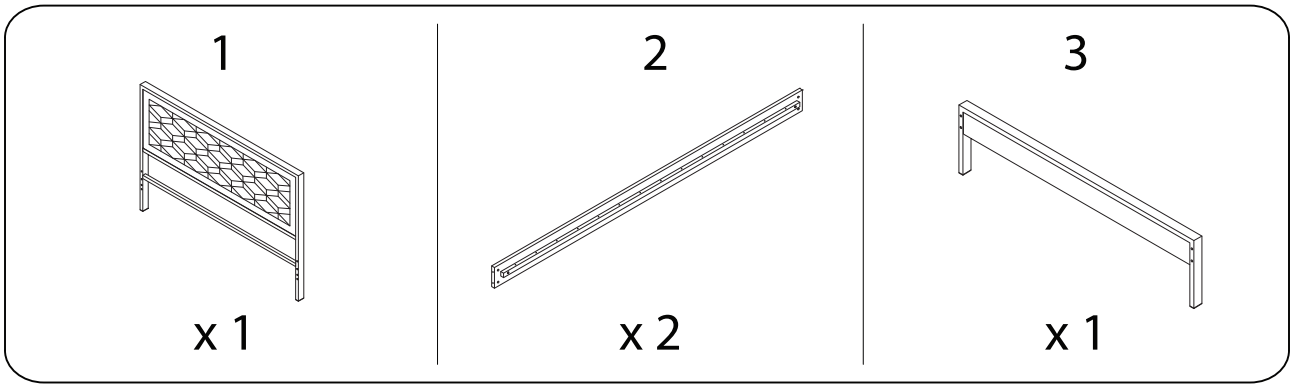



A

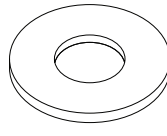M6
x
90
x 8


B

x 1


C

x 8


D

M6
x
15
x 12


E

M6
x
50
x 1


F

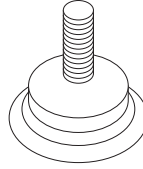M3.5
x
16
x 6


G

M4
x
25
x 28


H

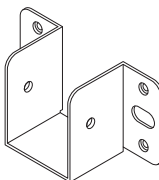x 3

I

x 3




J

x 4

K

x 1




L

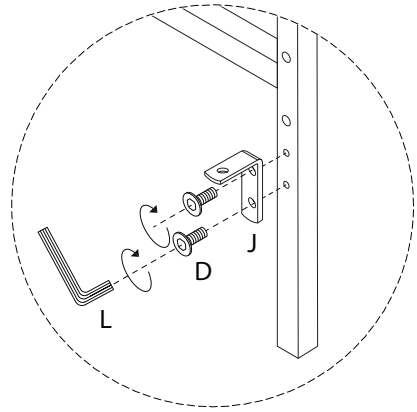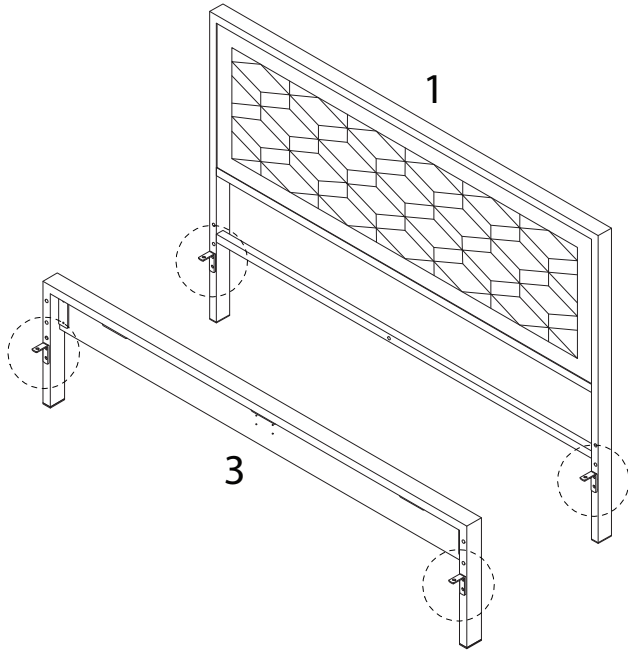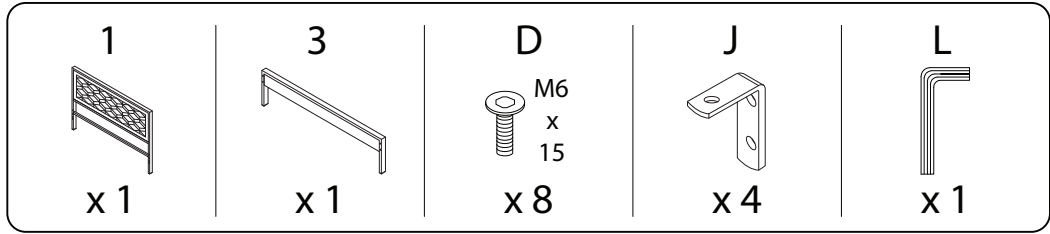x 1

M

M6
x
25
x 3

1

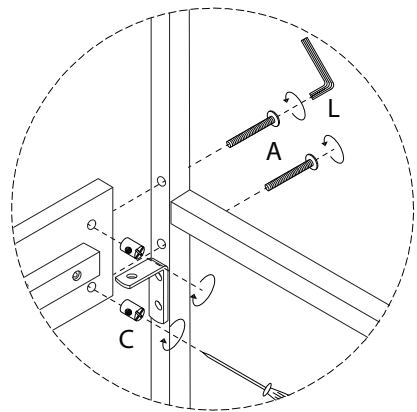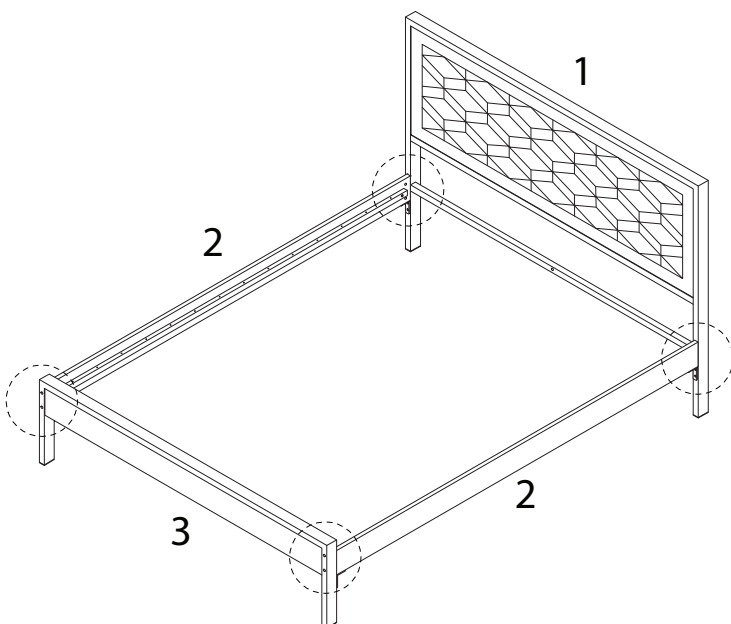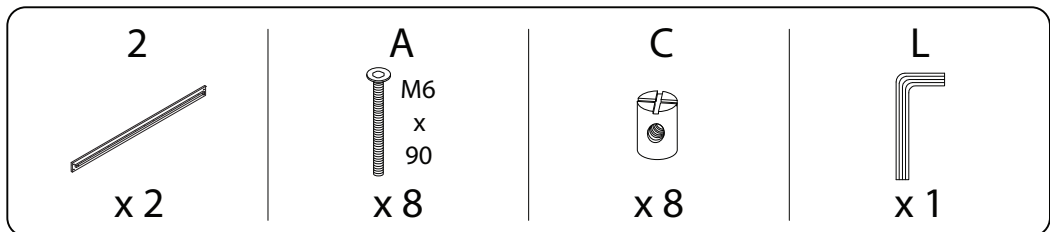

2




3

D





x 4

L




x 1

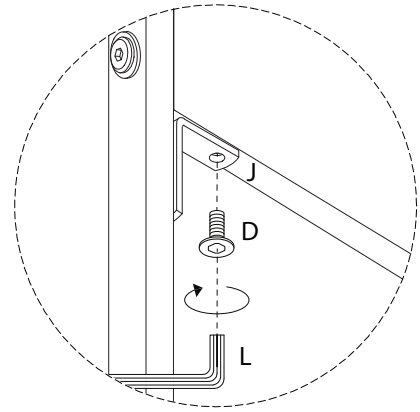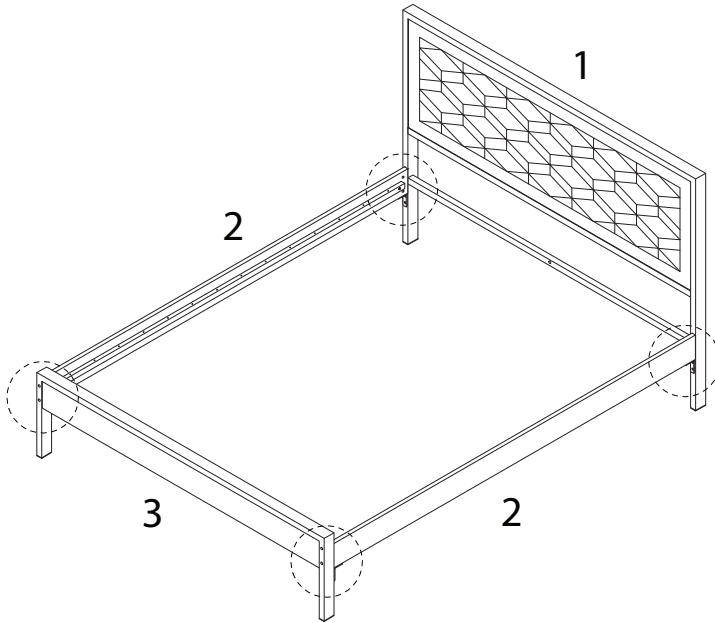


4

F





x 4







K



x 1

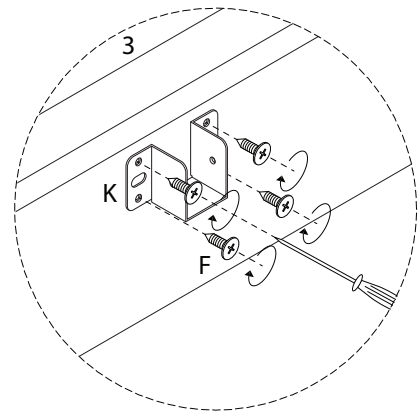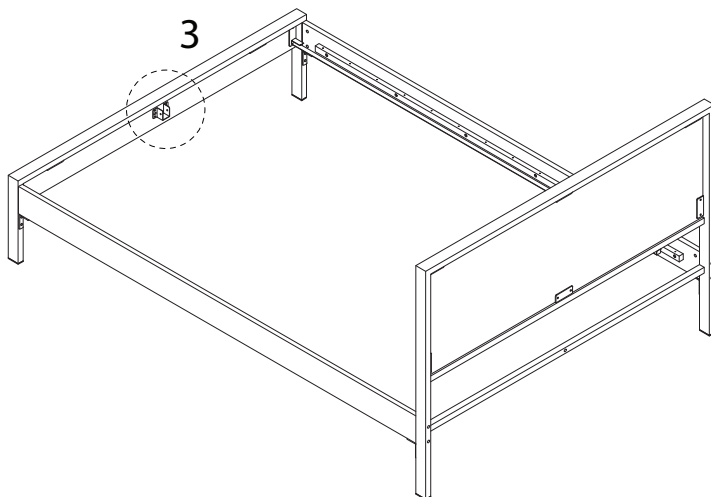


5 x 3

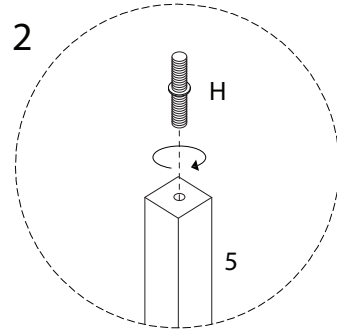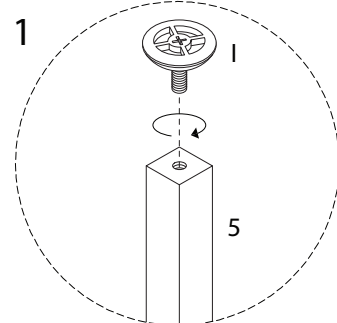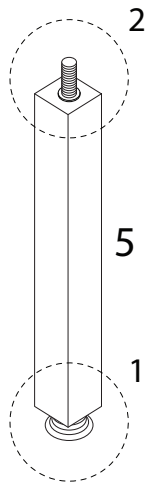



6



4

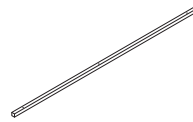



x 1

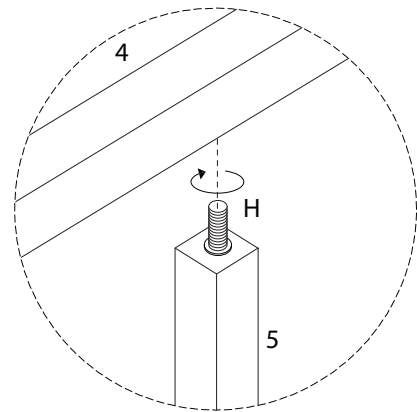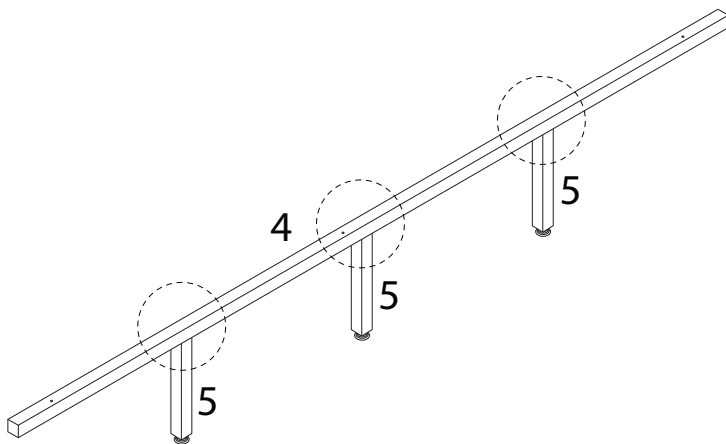

7

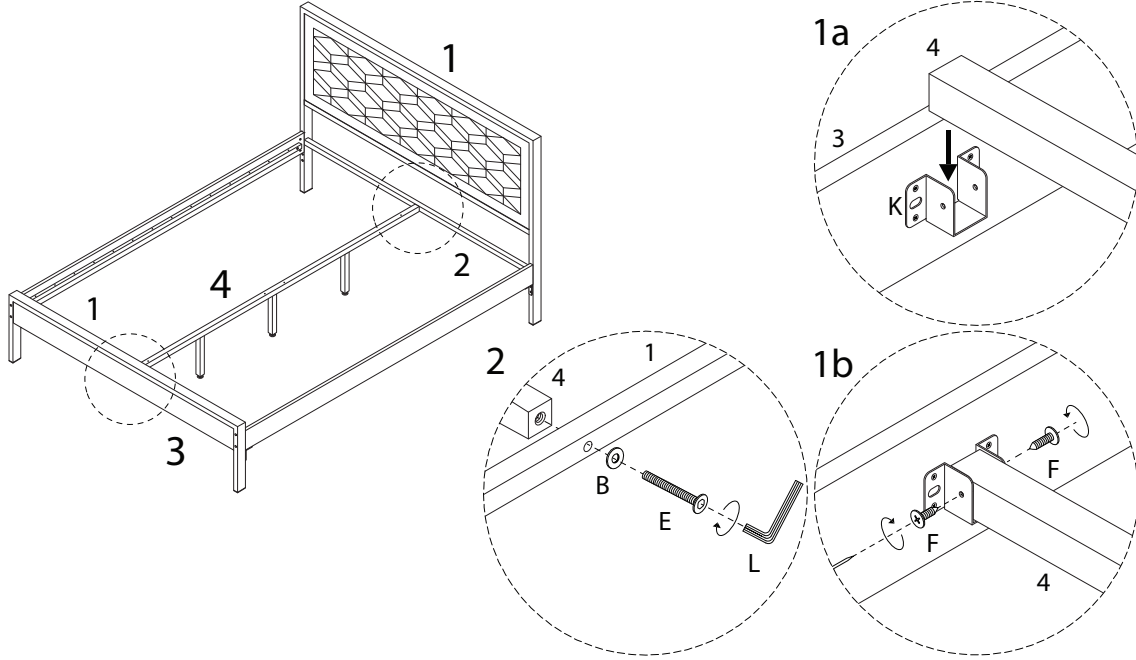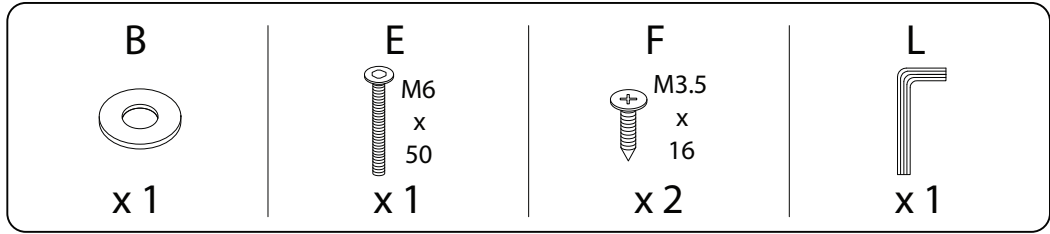

8

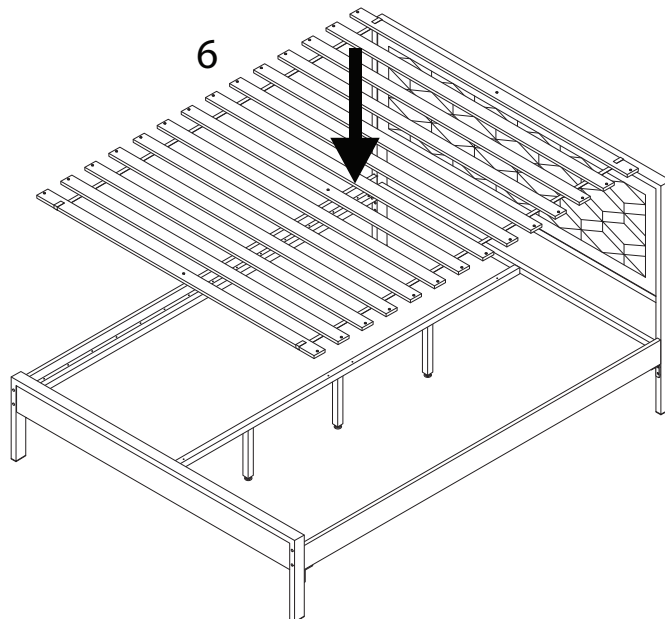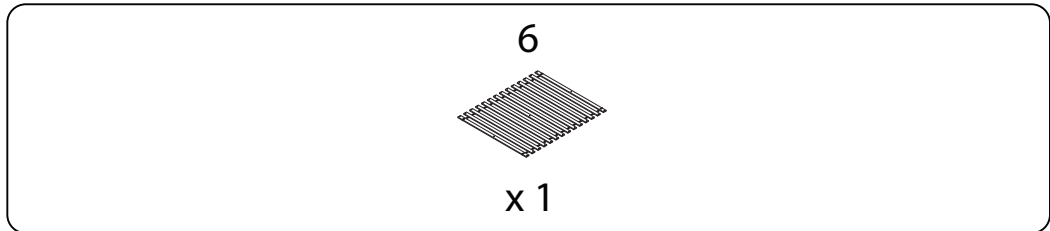

9

G
M4
x
25
x 28

L
x 1

M
M6
x
25
x 3

