


Metal-Fahrradgarage HWC-H66 für ein Rad


ASSEMBLY INSTRUCTIONS

Das Montageset ist am Inneren des Karton befestigt!
 The assembly set is attached to the inside of the carton!
 Le kit de montage est fixé à l'intérieur du carton!
 Il materiale per il montaggio è posizionato all'interno della scatola fissato con il nastro adesivo!
 El material de montaje se coloca dentro de la caja fijado con cinta adhesiva!


A	M5x12 x74	x4	B	M5x12 x4	x4	C	x1	D	x1	E	x1	F	x2	G	x8	H	x4	I	x4	J	M6x80 x4	x4
---	-----------	----	---	----------	----	---	----	---	----	---	----	---	----	---	----	---	----	---	----	---	----------	----

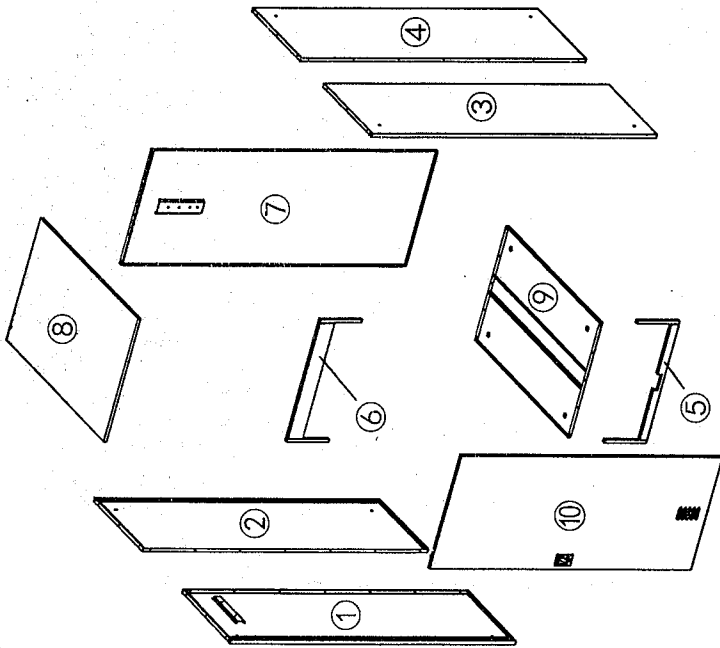


1.

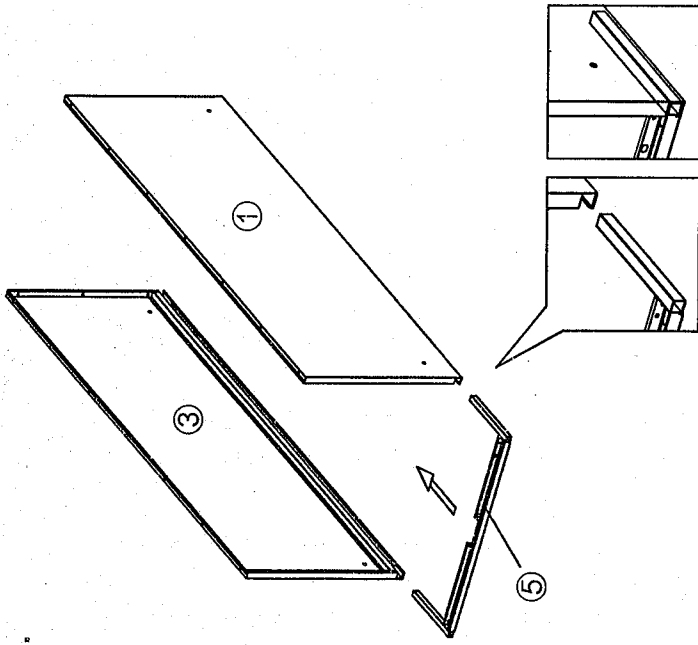

2.

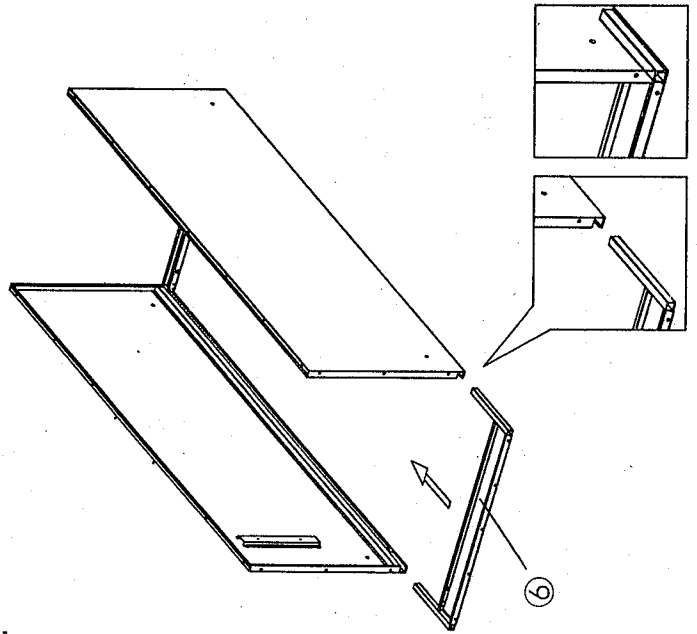

3.

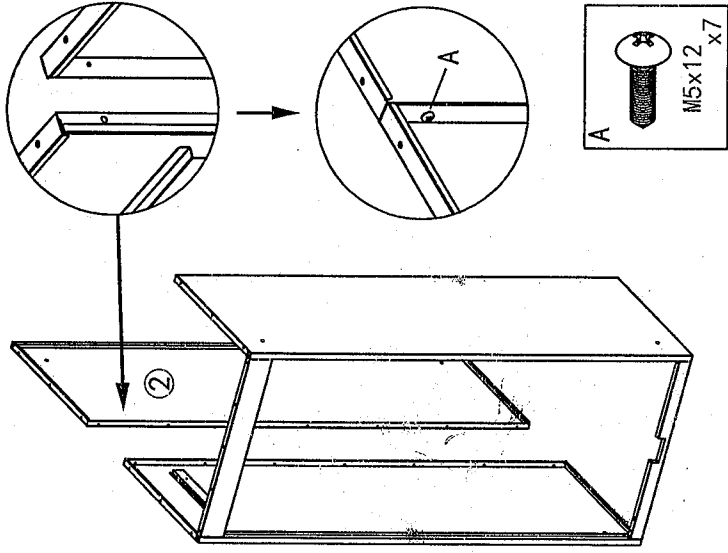

4.

