


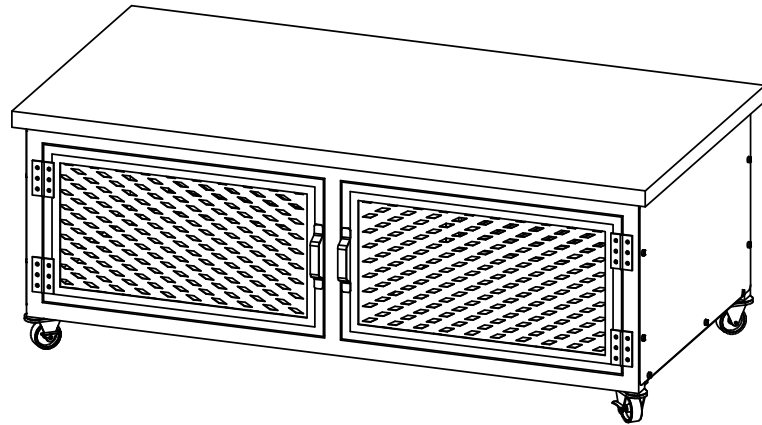










heute wohnen

Aufbauanleitung

Assembly instructions/Instructions de montage/
Instrucciones de montaje/Istruzioni di montaggio

ITEM NO.: 106030/106031



Ax1 	Bx1 	Cx1 	Dx1 	Ex2 
Fx2 	Gx20 M6*16 	Hx1 4mm 	Ix2 	Jx4 
				Kx12 M5*8 

Das Montageset ist am Inneren des Karton befestigt!

The assembly set is attached to the inside of the box!



Le kit de montage est fixé à l'intérieur du carton!

Il materiale per il montaggio è posizionato all'interno della scatola fissato con il nastro adesivo!

El material de montaje se coloca dentro de la caja fijado con cinta adhesiva!

Mendler Vertriebs-GmbH
Industriestr. 60
D-73642 Welzheim

heute wohnen

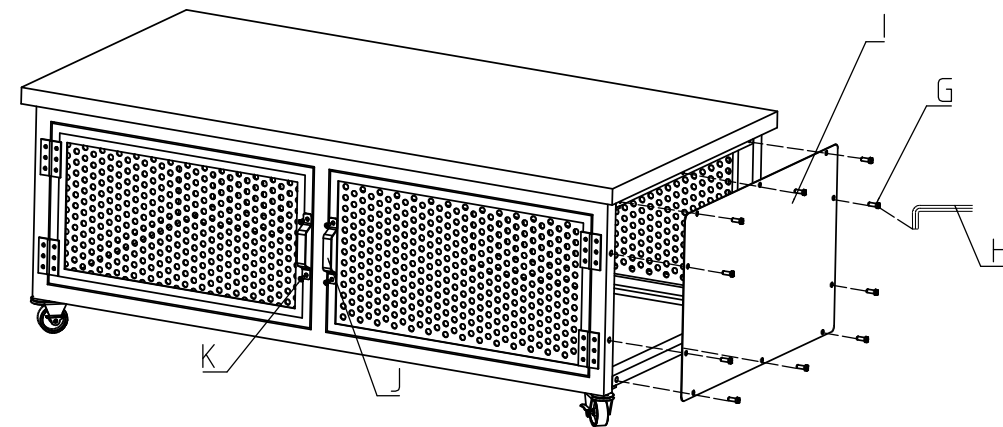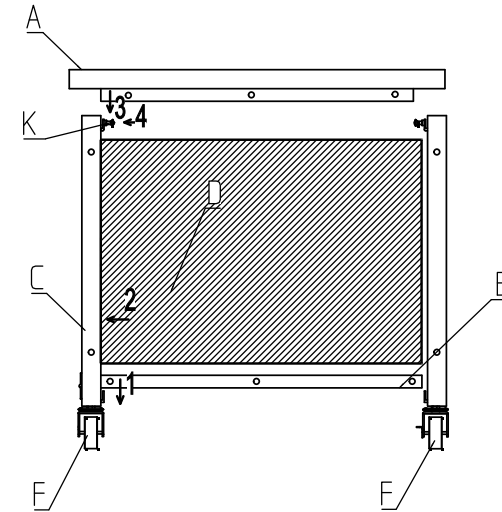

Mendler Vertriebs-GmbH
Industriestr. 60
D-73642 Welzheim